

SEDAS 2.0S

Solar Energy Data Acquisition System

System User Guide


INVOLAR Corporation Ltd.

INVOLAR Corporation Ltd.

Tel: +86(0)2151098006 Fax: +86(0)2150277705 Support E-mail: <u>tech@involar.com</u>
Website: www.involar.com

1

Step 1 Registration:

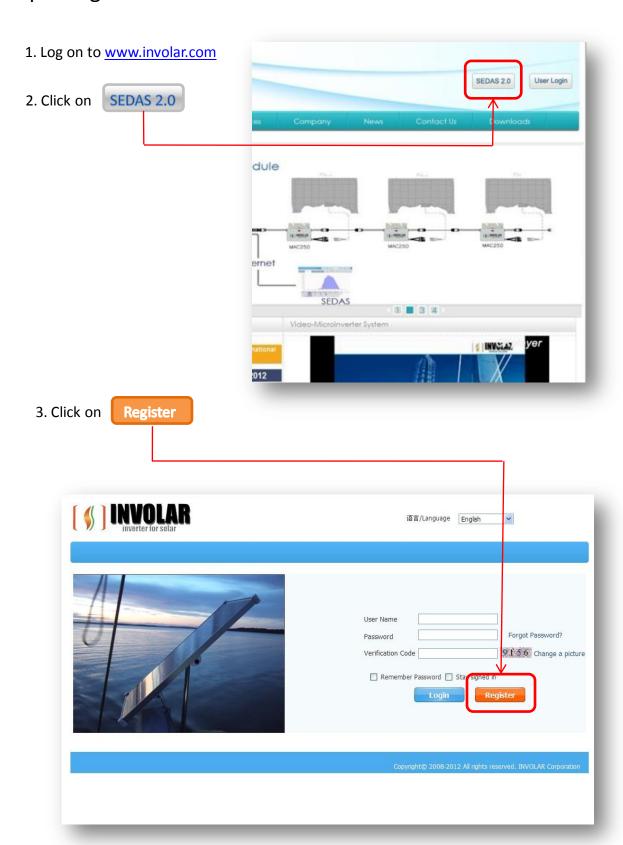

Registration continued:



4. Complete the required fields on the registration page;

Username - Create username for system.

Password - Create a password.

Confirm Password- Repeat the password

E-mail Account - Enter valid email address.

Country/Region - Select Installation location.

City - Input nearest City to Installation.

Timezone - Select Installation timezone.

IMPORTANT:

To ensure there is no conflicting issues between PV Module and Microinverter please complete the following fields:

PV Module rating Power - e.g 240W

PV Module Voc - *

*Must be less than 50V DC

Installer Company – Please enter Installer details.
Installer Phone – Please enter Installer details.
Installer email – Please enter Installer details.
eGate serial number – Serial number can be found on the eGate.


First Name – Please enter customer details.

Last Name – Please enter customer details.

Street Address - Please customer details.

Verification code - Enter the verification code shown in the box to the right.

5. Sign-in – Using the Username & Password created you are now ready to login.

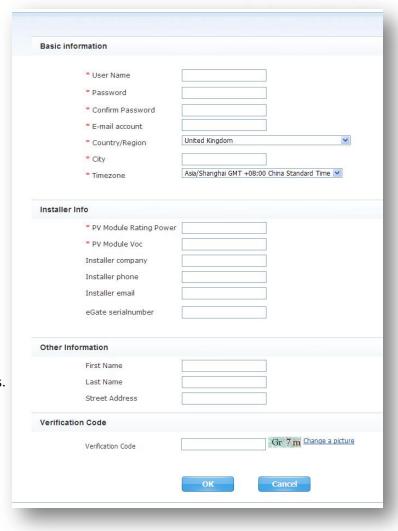




Step 2 Adding the eGate (s) to your system



- 1. If you entered the eGate Serial number during the registration process your eGate shall automatically appear in your account.
- 2. If the eGate serial was not entered or was not entered successfully you will see the screen below when you login.
- 3. Simply 'Click' on the 'Add eGate' button and enter the 17 digit Serial Number shown on the eGate label.
- 4. Additional eGates can be added during this process also.
- 5. 'Click' OK

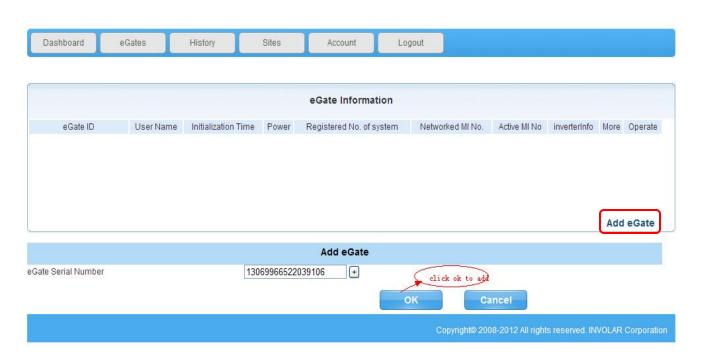


Dashboard





Each time you login you will see the home screen which displays the site information and current power generation of your system.

eGate List

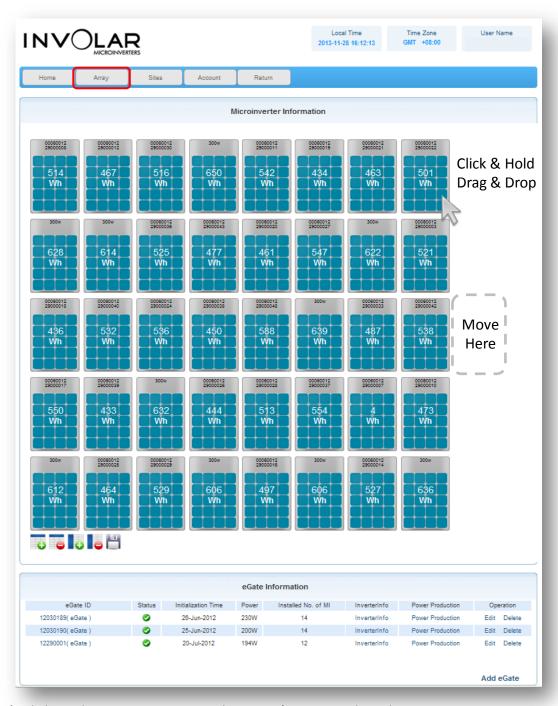

- ➤ Click on the eGate List to see the eGate's registered on the system.
- ➤ Additional eGate's can be added by clicking on **Add eGate**.
- ➤ Here you will see each microinverter registered to the eGate (s).
- ➤ The panels can be easily moved into position by 'drag & drop' using your mouse.

Site History



➤ View Historical data by selecting the Daily/7 Days/30 Days & 12 Months Tab

Account





- >Account information can be edited at anytime.
- ➤ You can change your login password.
- ➤ You can change your registered email address.

Troubleshooting

Should you have any technical problem with your system please contact our technical support team at: tech@involar.com

INVOLAR Corporation Ltd.

Room 407, Building 84, No. 887, Zuchongzhi Road, Pudong District, 201203 Shanghai, China

Tel: 86-21-51098006

Fax: 86-21-50277705

www.INVOLAR.com info@INVOLAR.com tech@INVOLAR.com